

	Pos. Code	Description
#1	500832	NARROW SHARE
	15 403034	FLEXIBLE PLATE CAST IRON SHARE L=6
	16 403038	INSERT L=6 FLEXIBLE PLATE TRIUM
	17 402987	PLANT CONTROL TRIUM_LOWER PART
	18 422280	NARROW SHARE TRIUM-BEST-TOP INS.L=8
#2	500833	STANDARD SHARE
	15 403035	FLEXIBLE PLATE CAST IRON SHARE L=9
	16 403039	INSERT L=9 FLEXIBLE PLATE TRIUM
	17 402987	PLANT CONTROL TRIUM_LOWER PART
	18 422281	STD SHARE TRIUM-BEST-TOP INS.L=14
#3	500834	MIDDLE SHARE
	15 403036	FLEXIBLE PLATE CAST IRON SHARE L=20
	16 403040	INSERT L=20 FLEXIBLE PLATE TRIUM
	17 402987	PLANT CONTROL TRIUM_LOWER PART
	18 422282	SHARE TRIUM-BEST-TOP INS.L=24
#4	500835	MEDIUM SHARE
	15 403037	FLEXIBLE PLATE CAST IRON SHARE L=24
	16 403041	INSERT L=24 FLEXIBLE PLATE TRIUM
	17 402987	PLANT CONTROL TRIUM_LOWER PART
	18 422283	MEDIUM SHARE TRIUM-BEST-TOP INS.L=33
#5	500836	LARGE SHARE
	15 403037	FLEXIBLE PLATE CAST IRON SHARE L=24
	16 403041	INSERT L=24 FLEXIBLE PLATE TRIUM
	17 402988	PLANT CONTROL TRIUM_LOWER PART
	18 422284	LARGE SHARE TRIUM-BEST-TOP INS.L=43
PLOUGHSHARE KIT		

12

On Oct 10, 2019, at 3:30 PM, Chad Fountain <cfountain@solexcorp.com> wrote: